


How to configure your BSNL Modem

Step 1 : Check your LAN Connection

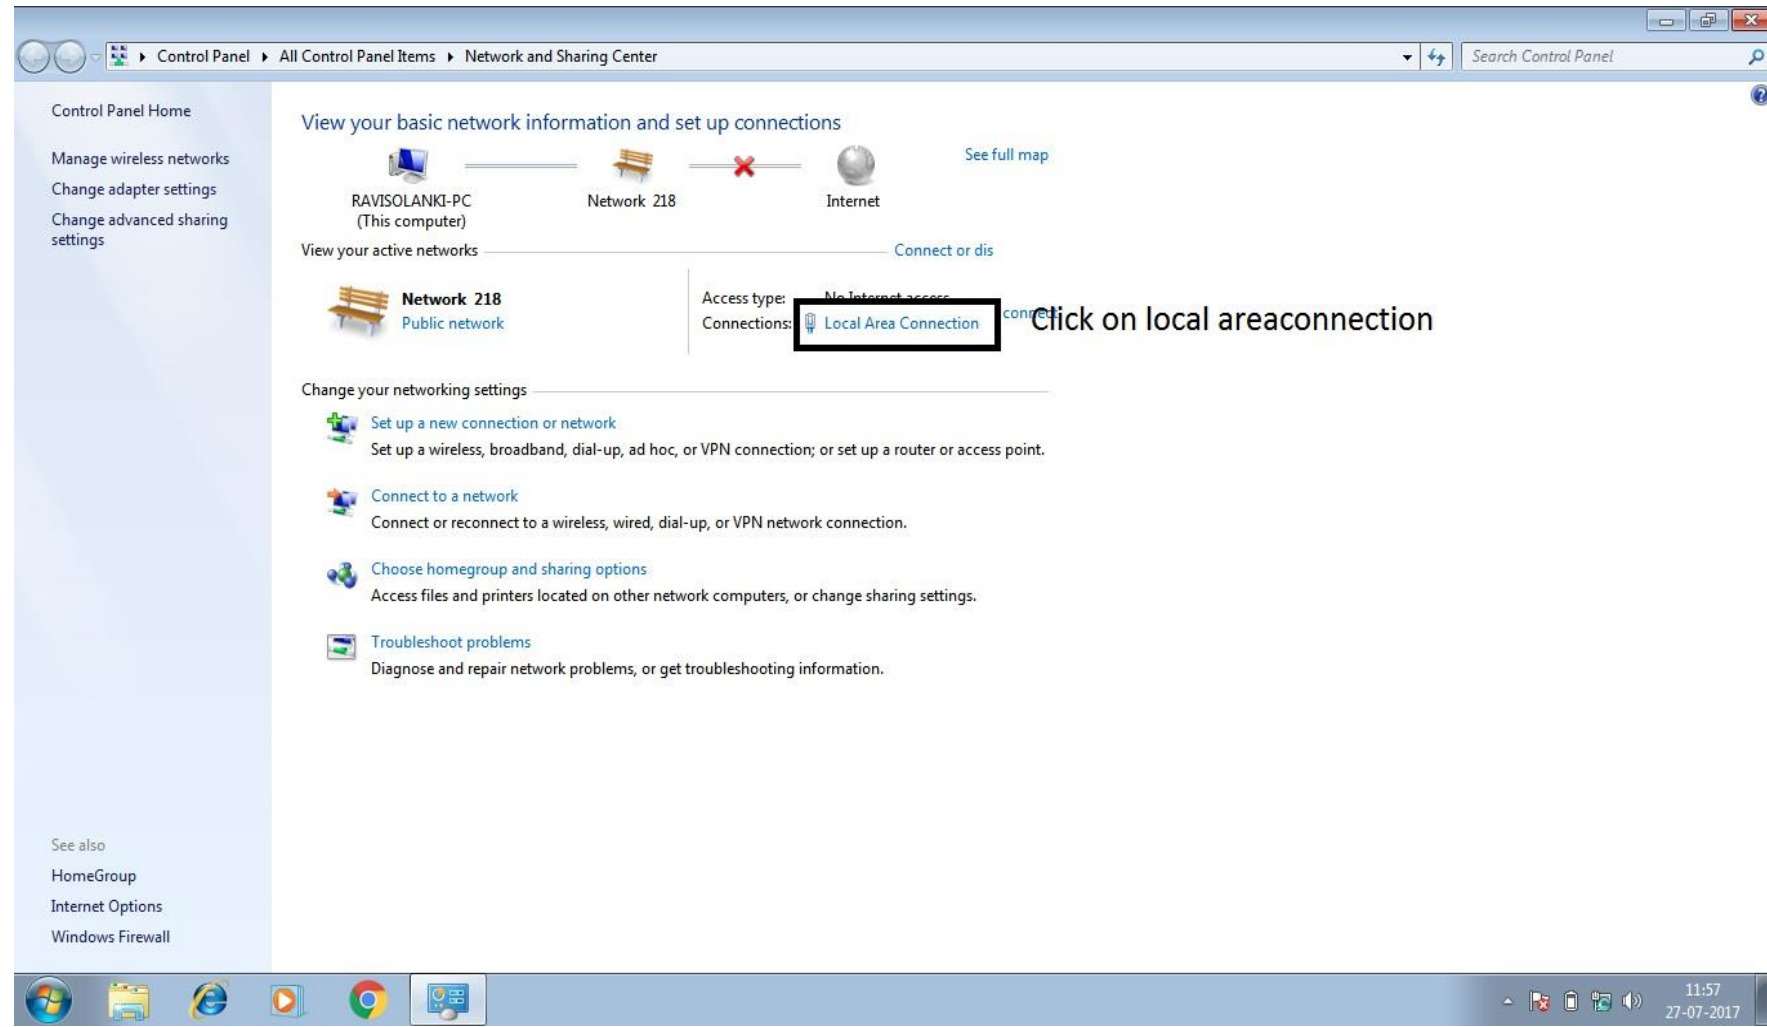

Control Panel Home

- Manage wireless networks
- Change adapter settings
- Change advanced sharing settings

View your basic network information and set up connections



See full map

View your active networks



Network 218
Public network

Change your networking settings

- [Set up a new connection or network](#)
Set up a wireless, broadband, dial-up, ad
- [Connect to a network](#)
Connect or reconnect to a wireless, wired
- [Choose homegroup and sharing options](#)
Access files and printers located on other
- [Troubleshoot problems](#)
Diagnose and repair network problems, o

Local Area Connection Status

General

Connection

IPv4 Connectivity:	No Internet access
IPv6 Connectivity:	No Internet access
Media State:	Enabled
Duration:	01:07:34
Speed:	100.0 Mbps

[Details...](#)

Activity

	Sent	Received
Bytes:	1,386,005	4,098,819

[Properties](#) [Disable](#) [Diagnose](#)

[Close](#)

Click on Properties

See also

- HomeGroup
- Internet Options
- Windows Firewall

Control Panel Home

Manage wireless networks
Change adapter settings
Change advanced sharing settings

View your basic network information and set up connections

RAVISOLANKI-PC (This computer) — Network 218 — Internet

View your active networks

Network 218
Public network

Change your networking settings

- Set up a new connection or network
Set up a wireless, broadband, dial-up, ad
- Connect to a network
Connect or reconnect to a wireless, wired
- Choose homegroup and sharing options
Access files and printers located on other
- Troubleshoot problems
Diagnose and repair network problems, o

See also

- HomeGroup
- Internet Options
- Windows Firewall

Local Area Connection Properties

Networking | Sharing

Connect using:
Realtek PCIe GBE Family Controller

Configure...

This connection uses the following items:

- ☒ Client for Microsoft Networks
- ☒ Network Filter Driver
- ☒ QoS Packet Scheduler
- ☒ File and Printer Sharing for Microsoft Networks
- ☒ Internet Protocol Version 6 (TCPv6)
- ☒ **Internet Protocol Version 4 (TCP/IPv4)**
- ☒ Link-Layer Topology Discovery Mapper I/O Driver
- ☒ Link-Layer Topology Discovery Responder


Install... Uninstall Properties

Description
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.

OK Cancel

Click here then Properties


12:33
27-07-2017

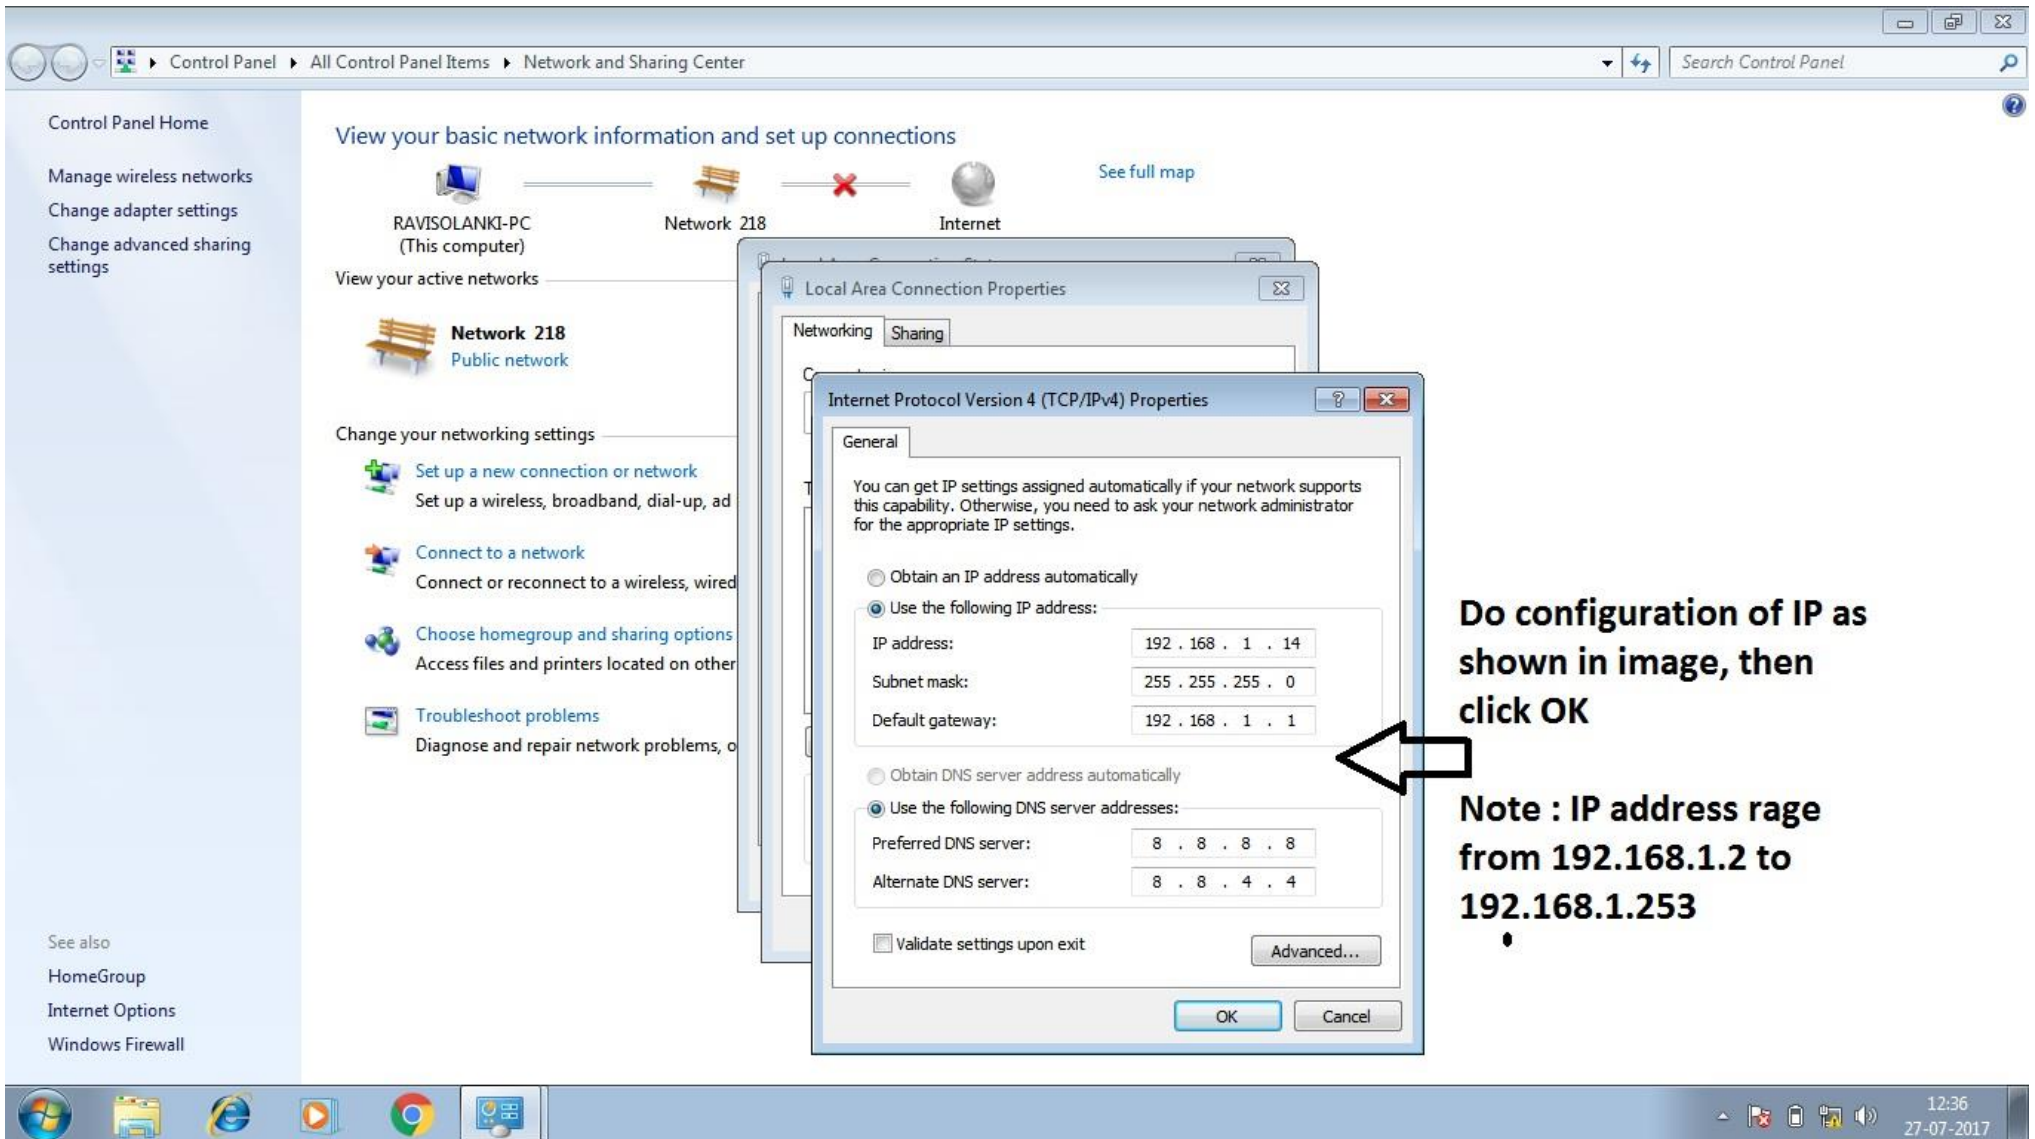

Do configuration of IP as shown in image, then click OK

Note : IP address rage from 192.168.1.2 to 192.168.1.253

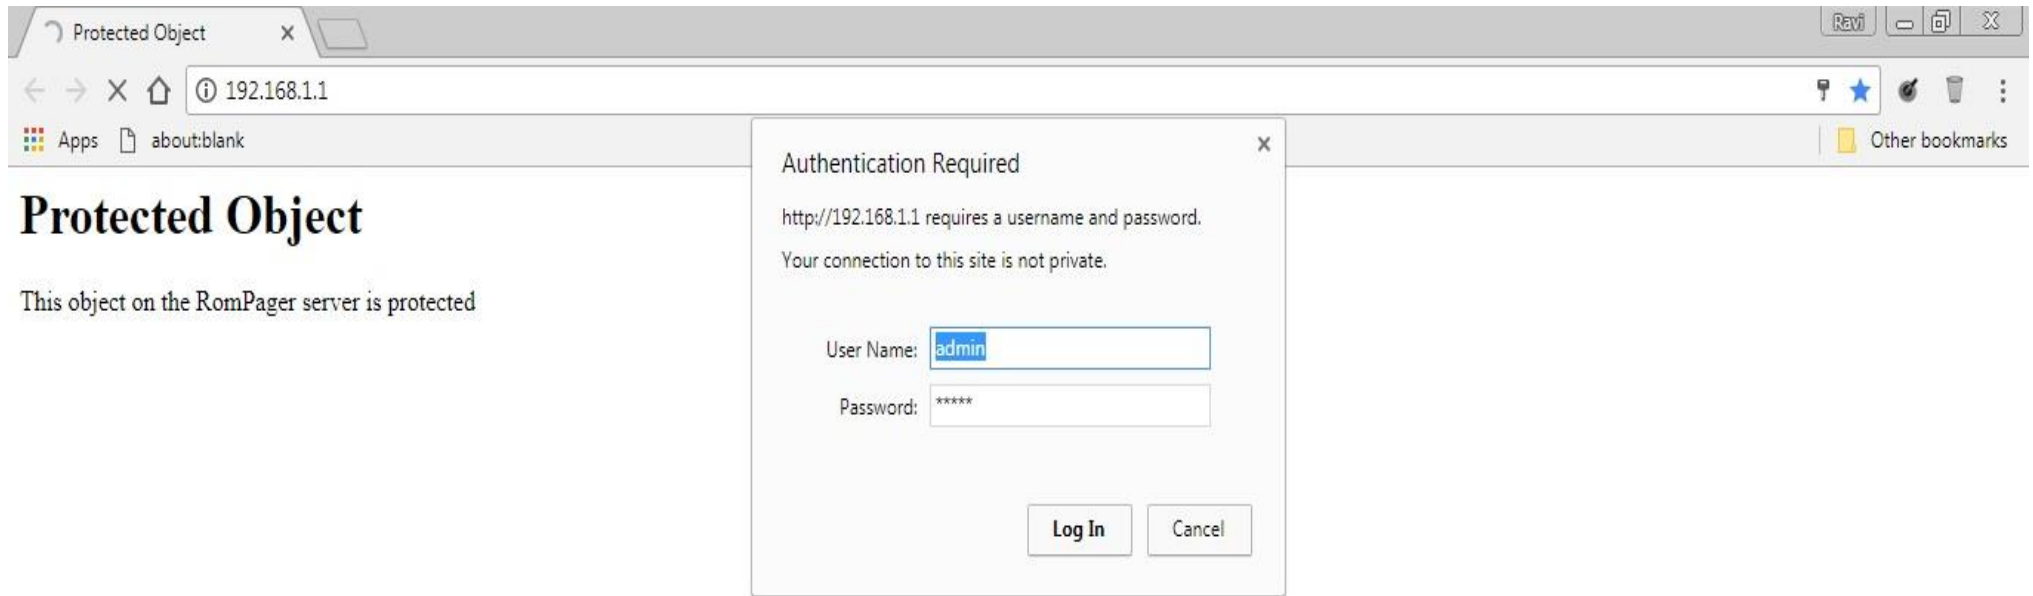

Step 2 : Configuration of Modem



Now enter 192.168.1.1 in browser

User Name : admin

Password : admin



Status

Interface Setup

Advanced Setup

Access Management

Maintenance

Status

Device Info

System Log

Statistics

Device Information

Model Number : DSLW200

Software Version : 2.1.1

Hardware Version : 1.1

Serial Number : 1CA5321A2904

MAC Address : 1c:a5:32:1a:29:04

LAN

IP Address : 192.168.1.1

Subnet Mask : 255.255.255.0

DHCP Server : Enabled

WAN

Virtual Circuit : PVC0

Status : Not Connected

Connection Type : PPPoE

IP Address : 0.0.0.0

Subnet Mask : 0.0.0.0

Default Gateway : 0.0.0.0

Primary DNS : 0.0.0.0

Secondary DNS : 0.0.0.0

NAT : Enabled

IPv6

Status : Not Connected

IP Address : N/A

Prefix Length : 0

Default Gateway : N/A

Click on Interface Setup





192.168.1.1

Not secure | 192.168.1.1

Apps | about:blank

Other bookmarks





Interface

Interface Setup

Advanced Setup

Access Management

Maintenance

Status

Internet

LAN

Wireless

6RD

ATM QoS : UBR

PCR : 0 cells/second

SCR : 0 cells/second

MBS : 0 cells

IPv4/IPv6

IP Version : ☐ IPv4 ☒ IPv4/IPv6 ☐ IPv6

Encapsulation

ISP : ☐ Dynamic IP Address
☐ Static IP Address
☒ PPPoA/PPPoE
☐ Bridge Mode

PPPoE/PPPoA

Service name :

Username : multiply

Password :

Encapsulation : PPPoE LLC

Bridge Interface : ☐ Activated ☒ Deactivated

Connection Setting

Connection : ☒ Always On (Recommended)
☐ Connect On-Demand (Close if idle for minutes)
☐ Connect Manually

IP Common Options

TCP MSS Option : TCP MSS(default:1400) bytes

IPv4 Address

Default Route : ☒ Yes ☐ No

Enter BSNL Username provided to you
Password is password...Enter all parameters in small letters.

U can search your user name in your bill. It will be in second page of BSNL bill.

Click SAVE



12:47
27-07-2017

192.168.1.1

Not secure | 192.168.1.1

Apps about:blank

Other bookmarks

SUPERNET Infocomm **BSNL** BROADBAND

Interface **Interface Setup** Advanced Setup Access Management Maintenance Status

Internet LAN **Wireless** **Click on Wireless TAB**

Access Point Settings

Access Point : ☒ Activated ☐ Deactivated **Activate Access Point**

Channel : Auto Current Channel : 10

Beacon Interval : 100 ms(range: 20~1000)

RTS/CTS Threshold : 2347 bytes(range: 1500~2347)

Fragmentation Threshold : 2346 bytes(range: 256~2346, even numbers only)

DTIM : 1 (range: 1~255)

Wireless Mode : 802.11b+g+n

11n Settings

Channel Bandwidth : 40 MHz

Extension Channel : above the control channel

Guard Interval : AUTO

MCS : AUTO

Multiple SSIDs Settings

SSID Index : 1

Broadcast SSID : Yes No

SSID : BSNL_AP **Enter your desired WI FI Name**

Authentication type : WPA-PSK/WPA2-PSK

WPA-PSK/WPA2-PSK Mixed Mode

Encryption : TKIP/AES

Pre-Shared Key : 12345678 **Enter your desired Wi-Fi Password & Click SAVE**

Wireless MAC Address Filter

Active : ☐ Activated ☒ Deactivated

Action : Allow Association the follow Wireless LAN station(s) association.

Mac Address #1 : 00:00:00:00:00:00

Mac Address #2 : 00:00:00:00:00:00

Mac Address #3 : 00:00:00:00:00:00

13:50 27-07-2017

Access Control Setup

Access Control Editing

ACL : ☒ Activated ☐ Deactivated **Activate ACL**

ACL Rule Index : 1

Active : ☒ Yes ☐ No

Secure IP Address : 0.0.0.0 ~ 0.0.0.0 (0.0.0.0 ~ 0.0.0.0 means all IPs)

Application : ALL

Interface : LAN

Access Control Listing

Index	Active	Secure IP Address	Application	Interface
1	Yes	0.0.0.0-0.0.0.0	ALL	LAN

SAVE DELETE CANCEL



Access Management

Interface Setup

Advanced Setup

Access Management

Maintenance

Status

ACL

Filter

SNMP

UPnP

Click on UPnP Tab

Universal Plug & Play

UPnP : ☐ Activated ☒ Deactivated

Auto-configured : ☐ Activated ☒ Deactivated (by UPnP-enabled Application)

Deactivate both Parameters

SAVE

Click SAVE



192.168.1.1

Not secure | 192.168.1.1

Apps about:blank

Other bookmarks

SUPERNET Infocomm

Click on Maintance Tab

BSNL BROADBAND

Maintenance Interface Setup Advanced Setup Access Management **Maintenance** Status

Administration Time Zone Firmware SysRestart Diagnostics

Administrator

Username : admin

New Password :

Confirm Password :

Enter New Login Password : bsnl123


New Password : bsnl123

Confirm Password : bsnl123

SAVE CANCEL

192.168.1.1/navigation-maintenance.html

13:57 27-07-2017

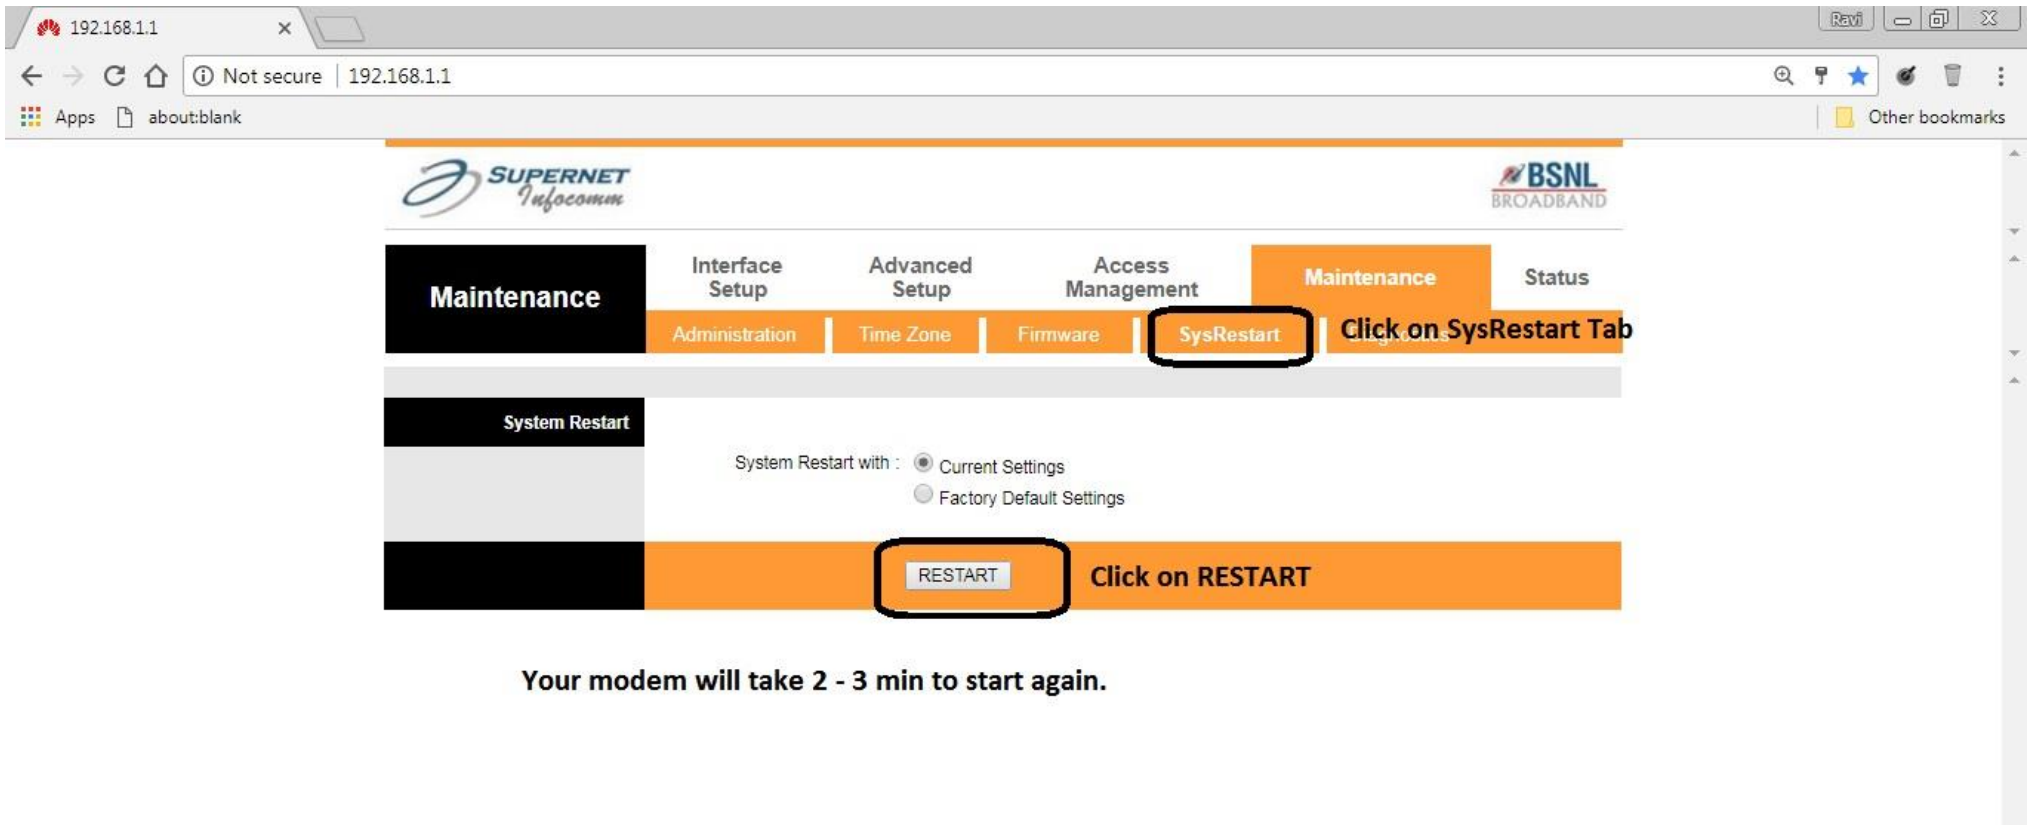

Thanks,

Ravi Solanki

JE, Broadband

BSNL, Vadodara (M) 09408080814